

No warranty in case of non-compliance


1 | Fields of application

Terrace profiles specifically for outdoor use, e.g. flooring for garden or roof terraces, around swimming pools, etc. For applications that require approval by building authorities, a load-bearing, closed sub-structure with sufficiently calculated dimensions is required.



8 | Expansion / separating and expansion joints

A total expansion due to thermal and climatic conditions of max. 6mm/m in length and width **must** be taken into account. Areas with **length greater than 6m** must be divided into sub-areas with consistent separating joints between them (see section 11 Installation Instructions). Expansion joints of at least 20mm must be maintained to all wall connections.

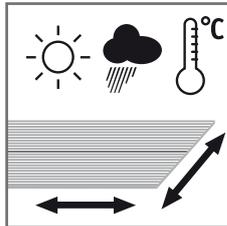


2 | Storage

Keep dry, flat and in its original packaging.




9 | Longitudinal profile butt joints

Staggered longitudinal profile joints must always be centred on 2 sub-framework bars. The size of the consistent butt joint **X** depends on the installation length of both adjacent profiles and the expansion dimension of 6mm/m.

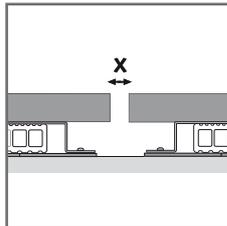

3 | Processing

paseo profiles can be sawn, milled or drilled using any conventional woodworking tools.

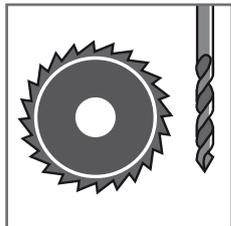


10 | Cleaning + care

Clean with warm water and typical household detergent, e.g. Fairy. Oil and grease spots can be removed with, for example, power grease remover, stain removal spray or multi-purpose cleaner. In event of heavy soiling, use a high-pressure cleaner, if necessary (max. 80 bar, no rotary nozzle).



4 | Sub-framework / fixing

A load-bearing and frost-proof foundation (bed of ballast or concrete surface) is required. If necessary, weed control fabric should be laid to prevent weed growth. Provide for point-like support of all sub-framework bars on concrete slabs with rubber pads. Affix all sub-framework edge bars to the foundation using brackets.

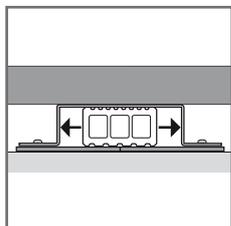


Apparent water spots may form at the transition between weathered and partially sheltered terrace surfaces. These water spots can generally be removed with large amounts of clean water or our terrace cleaner.

Algae and moss as well as mould and fungi can grow on any outdoor surface. We recommend our terrace cleaner for thorough cleaning.


5 | Surface drainage

paseo profiles are to be laid at a gradient of at least 1.5–2% in the longitudinal direction. **Standing water in the profile cavities must absolutely be avoided!**

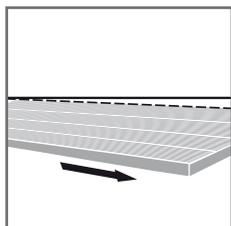


11 | Installation instructions

Please absolutely follow the detailed installation instructions for the WERZALIT terrace flooring. The most recent version is always available on the Internet (www.werzalit.com). No warranty claim in case of non-compliance!

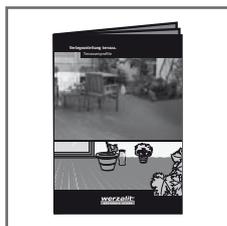

6 | Ventilation

There must be adequate air circulation underneath the surface. Spaces between and below the sub-framework may **not** be filled in. A ventilation gap of at least 20mm must run all the way around. **Do not allow any construction elements to remain in direct contact with soil or grass!**

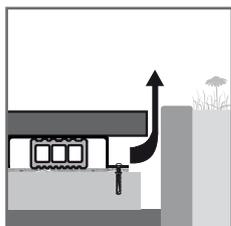


12 | Queries

WERZALIT UK Office
London, Kent, BR1 3PN
Phone +44 (0) 208 289 2600
E-mail n.shotton@werzalit.com
www.werzalit.com



7 | Fastening spacing

x = 600 mm max.
Profile overhangs by 500 mm max.

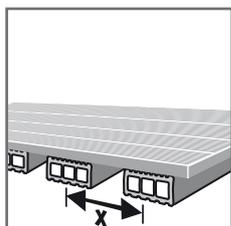

werzalit®
LASTING. BEAUTY.